


# Techserv CNC Remote Control

Press both shoulder buttons (L & R) to enable controller

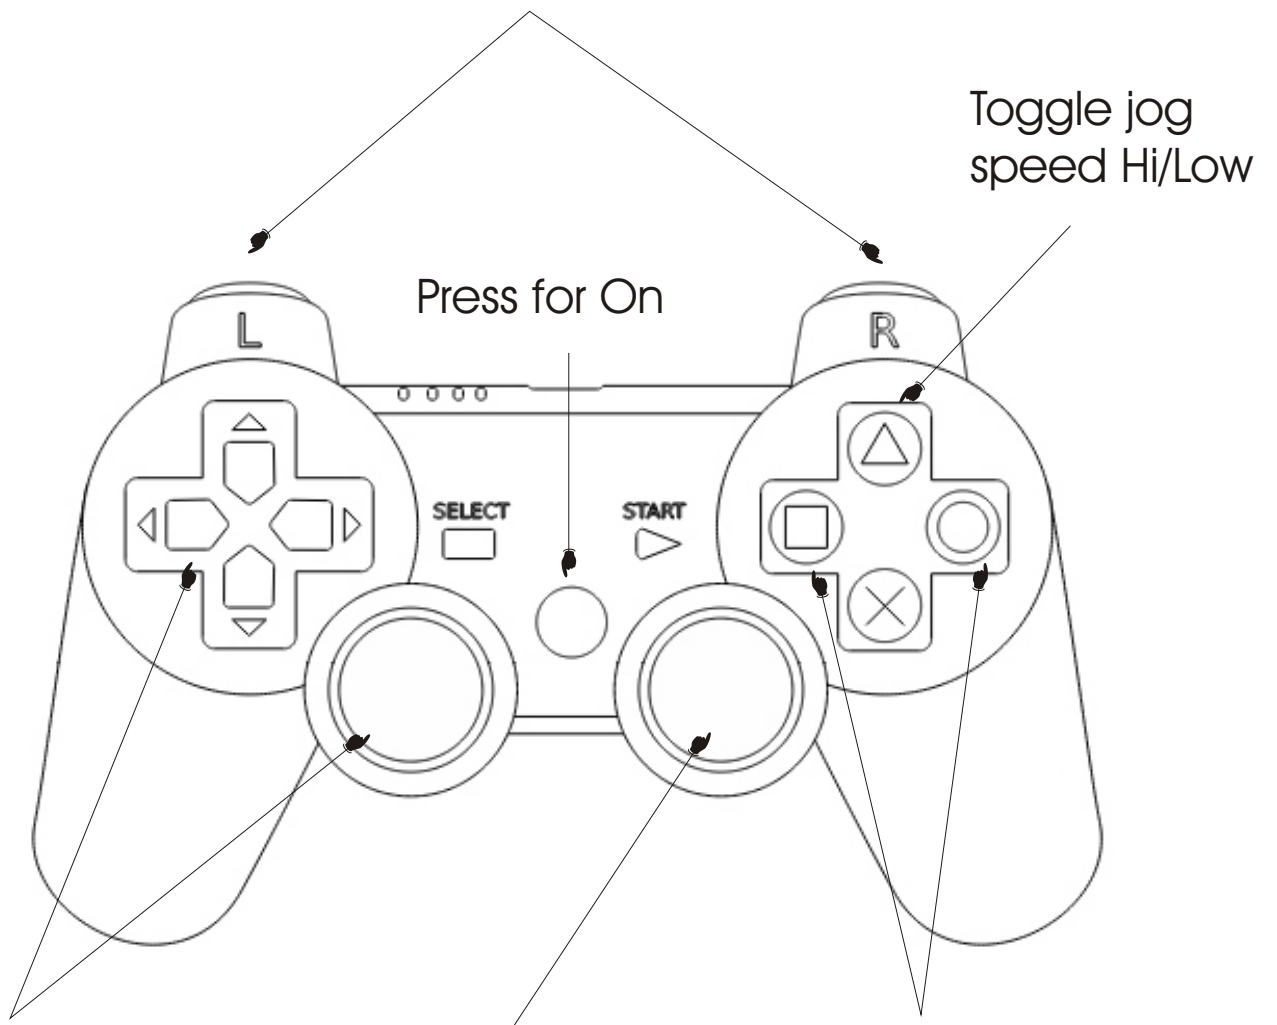

Use jog pad or analouge joystick to move

Z axis raise/lower

Drive speed raise/lower  
Operates only when running a shape